
Handheld Car Vacuum Cleaner

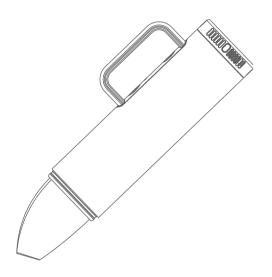

產品使用說明書 MAX-S09FDWVCD





企業介紹

maxcare 集團領導人憑著二十多年生產健康按摩產品經驗,了解亞洲人對按摩 產品的特別需求,創立了maxcare 品牌,並於2012年在香港大力拓展按摩產品市場, 更2017年獲得香港名牌殊榮。maxcare 以香港作為基地,專注於研發、生產及銷 售家庭健康器械。

moxCofe 秉持「科技提升生活質量」、「用心關愛家庭健康」的服務宗旨・不 開推出創新性的高品質產品・moxCofe 産品不僅通過歐盟Cc、美國ULFIT・德國GS、 TUV、中國3C等多項國際裏利。

maxcore 在集團創立者的領導下及企業使命的推動下,現已成為香港最具競學優勢的家庭健康按摩品牌之一。maxcore 企業在專注於研究按摩椅技術的基礎上 融入人們對生活的全新理解——簡約、時尚的設計元素。maxcore 本著關愛生活的 健康原則。努力致力於研發、設計、生產優質的家庭健康按摩產品,為家庭和辦公室 人群提供高品質的健康按摩產品和全身全方位的健康解決方案。maxcore 將「無限 關愛、源自點滴」的企業理念融入產品之中,將健康帶到每個人的身邊。

Handheld Car Vacuum Cleaner

感謝您選購MAXCARE產品·使用前請仔細閱讀產品使用說明書·並特別注意安全事項·以便正確操作及使用本產品。

本手冊提供使用者安全及有效的操作模式,請在閱讀後妥為收藏,以便 日後隨時取出參閱。

目錄

安全注意事項	P.01 - P.02
機件名稱及功能	P.03
使用方法	P.03 - P.06
產品的清潔、保養	P.07
常見問題及處理方法	P.08
產品技術參數	P.09

☎ 安全注意事項

1. 重要安全警告

- 只供成人使用。
- 請勿把產品放進水中或讓產品進水。
- 請勿掉下或誤用產品。
- 請使用與此產品匹配的電源。
- 當產品處於工作狀態中或充電時,請勿放置不顧。
- 勿使兒童及寵物接折此產品的可活動部分
- 在使用過程中,請務必確認問圍沒有人或癰物,以免造成意外。
- 請使用與此產品匹配的雷源。
- 用後或清潔前請拔離電源插頭,以免造成設備或人身損害。
- 不可使用未推薦的配件及附件。
- 請勿在室外使用此產品。
- 請仔細參閱本操作手冊之後再按本手冊指示使用此產品。
- 禁止將此產品用於本手冊未列出的其它用途。
- 使用前,請檢查機件是否破損,如有破損請立即停止使用,請職絡本公司來修理。
- 機身破損或損壞時不得使用此產品。
- 請勿在此產品外殼或外套破損的情況下使用。
- 請勿使任何物品落入此產品內。
- 使用此產品過程中不可睡覺。
- 請勿在駕駛時使用此產品。
- 醉酒或威覺不適時請勿使用此產品。
- 使用此產品時請勿禍分用力,以免受傷。
- 不在褲子口袋裡裝著硬物的情況下使用。
- 電源插頭上附著針、垃圾或水份時不可使用。
- 電源線破損時,請勿私自拆卸更換,應聯絡本公司更換修理。

2. 使用環境

- 請勿使用有快速充電功能的電源充電,避免產品進入電路保護狀態。
- 請勿在高度潮濕的環境如浴室中使用此產品。
- 在環境溫度急劇變化時請勿立即使用此產品。
- 請勿在灰塵嚴重或有腐蝕性氣體空間環境中使用此產品。
- 請勿在狹小空間或空氣流涌不暢處使用此產品。
- 使用完畢後請關閉雷源。
- 請勿在室溫高於40℃的環境下使用本產品。
- 請勿在室溫低於5°C的環境下使用產品,因為潤滑油的稠化可能會加大機器齒輪傳動件的 磨損,影響使用壽命。
- 請勿在雷擊時使用, 並將電源插頭拔離電源插座。
- 請勿於室外使用。
- 請勿將產品放置在靠折火爐或陽光直射的地方。
- 如產品由低溫儲存處移到溫暖環境使用時,內部金屬機件可能會聚集水氣而影響產品的正常運作,甚至造成機器損壞,建議移動後將產品在正常室溫放置一小時後再開機使用。

☎ 安全注意事項

3. 安全事項

- 請勿在產品上放置重物。
- 本產品僅限一人使用,請勿兩人或以上同時使用。
- 檢查雷壓是否符合此產品的規格要求。
- 請勿使用濕手拔插電源插頭。
- 勿使水淮入此產品內,避免觸電或使此產品受捐。
- 插拔電源插頭時切勿拉拽電源線,不可過於粗暴。
- 切勿使雷線受捐或更改此產品電路。
- 切勿用濕布清潔此產品電源開關、插頭等可帶電部位。
- 如果發生停雷應該離開此產品,以免雷力突然恢復時導致傷害。
- 如果在使用中感到此產品異常請立即停止使用,並向本公司諮詢。
- 本產品不提供給身體有殘障、感觀或神經有缺陷或缺乏經驗與常識的人士(包括兒童)使用,除非他們得到那些對他們的安全負責的人員關於如何使用該產品的監督與指導。
- 兒童必須被監督以確保他們不會拿產品來玩耍。
- 如果電源線指壞,為了避免危險,必須由本公司更換。
- 不要將雷源線靠折熱的或運動的物體。
- 移動前必須切斷電源, 拔掉插頭。
- 如果發現產品損壞、破裂、漏電及相關部位暴露出來時禁止使用。
- 當產品處於丁作狀態中請勿放置不顧:
- 充雷時請不要開機使用:

% 4. 產品保養和維護

- 本產品只能由本公司維修。用戶不可自行拆卸或修理。
- 請記住在使用後關閉總電源開關。
- 電源插座鬆動時,切勿使用此產品。
- 若長期不用應將此產品電源線卷起。並把此產品貯存在乾燥無塵的環境中。
- 切勿將此產品貯存在高溫或明火附近。勿使陽光長期直射。
- 請用乾布清潔此產品。不可使用稀釋劑、苯或酒精。
- 本產品機械裝置經特別設計與製造,無需特別維護。
- 不可用尖銳物品刺向此產品。
- 請間歇使用,不應使此產品長期連續運轉。

○ 5. 常見現象處理

- 運行中發出雷機聲:屬下常運作聲音。
- 本產品運作停止:額定時間到,此產品自動啟動關閉按鍵;此產品連續工作時間過長,溫 控保護開關自動關機,可讓此產品休息半小時後再使用。

機件名稱及功能



產品結構:


- 1. 主機
- 2.2合1 毛刷
- 3. 吸嘴蓋
- 4. USB 充雷線

● 使用方法

首次使用前:

1. 拉開手把並打開吸塵蓋



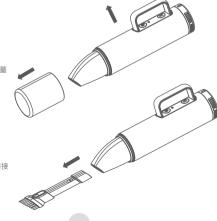



使用方法

充電方式:

如果使用中發現紅燈慢閃,說明電量不足,需要充電。

- 1) 停止產品工作並放置於檯面上。
- 2) 將USB充電線的USB 端插入5V 2A插頭並連接電源 (插頭需自行準備)。
- 3) USB充電線的Type C 端插入主機上Type C 口。
- 4) 綠燈慢閃,為正常充電。
- 5) 綠燈常閃,說明已經充滿電。
- 6) 將充電器從電源和產品上拔出,並收納好。





- 請注意產品充電□不可有水滲入,否則會造成產品故障。
- ·請勿在0°C以下或40°C以上的地方進行充電或保管,否則會造成產品性能降低。
- · 充雷中,充雷器温度會上升,屬於正常現象。

使用方法 (吸塵器部份):

 
1. 打開吸嘴蓋並按一下此開關鍵,開啟產品,再按一下此開關鍵,關閉產品。



2. 將2合1 毛刷插入吸塵口。



3. 按一下此開關鍵,開啟產品,再按一下此開關鍵,關閉產品。







使用方法

使用方法 (手電筒部份):

 
1. 按一下此閃燈鍵, 遠光燈長亮。



 2. 再按一下此閃燈鍵,關閉遠光燈,同時四顆小夜燈長亮。



 3. 第三次按下此閃燈鍵·關閉四顆小夜燈,遠光燈以SOS頻率閃爍。




以上三步驟為一個循環,在任何一個步驟下長按此閃燈鍵3秒關閉手電筒。

使用方法

使用方法 (倒塵及清潔集塵盒):

- 1. 順時針旋轉集塵盒,向外拔出集塵盒。
- 從集塵盒內部拉出過濾網組件,傾倒垃圾 後清洗集塵盒。
- 3. 逆時針旋轉並向外拉出過濾網支架,取出內部過濾網進行清洗或者更換。
- 4. 各部件充分晾乾後、根據拆解步驟裝回即可,步驟2的清洗集塵盒和步驟3不需要每次倒塵都操作,只有當集塵盒內部和過濾網內部,較前購時,才需要按此步驟清洗集塵盒和鴻鴻網。

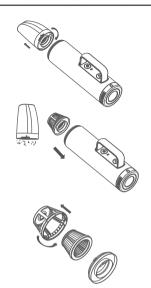



- 本機適用於室內使用,使用前必須先閱讀此使用說明。
- 2. 滴用於清掃小於10mm的顆粒或灰塵。
- 3. 不適用於清掃液體,有機溶劑,建築垃圾及工業金屬垃圾。
- 4. 當持續放電較長時間至完全放電時 · 休息30分鐘再充電 · 以保護電池 · 延長使用壽命。
- 5. 請將清潔乾淨的本機和所有配件收藏於乾燥陰涼處。
- 6. 產品閒置6個月,要放電,再充電一次。
- 7. 產品放電充電三次,馬達和電池達到最佳。



產品的清潔、保養

浩潔

- 清潔之前,請確認電源開闢已經關閉,電源線插頭已經從插座拔出。
- 產品和控制面板的表面請用柔軟的布進行擦拭清潔。
- 請用輕微濕潤的布進行擦拭,再用乾布抹乾。



- · 切勿濕手拔插雷源插頭。
- 切勿用水沖洗此產品,或將水或其它液體弄到產品內部。
- ·切勿使用苯或稀釋劑等具有腐蝕性的清潔劑來清潔此產品·否則可能會造成此產品褪色,此產品結構受到腐蝕、開製。
- 此產品潮濕時,請勿拆卸或使用此產品,讓此產品自然乾燥即可。

保養

- ·確認電源開闢關閉、電源線插頭已經從插座拔出。
- 請保持產品清潔並遠離高濕度或高溫的場所以及有揮發性氣體的環境。
- ·如果長時間不使用產品,請用防塵罩 (請自行購買) 套住產品,防止落入灰塵。



切勿將此產品放置於陽光直接照射或高溫的場所,以免造成產品褪色 及機件損壞。

溫馨提示

- · 長年使用時 · 請務必檢查是否有以下症狀 :
 - * 有焦糊氣味。
- * 觸動導線後有時通電,有時斷電。
- * 電源線發熱。
- * 雷源線是否破損。
- * 其它異常。



- ·如有上述現象 · 為防止故障和事故的發生 · 請停止使用此產品 。
- 切斷電源開闢,拔下電源插頭,並與本公司聯絡。
- 切勿私自拆制修理。



? 常見問題及處理方法

將本機送至維修前,請先仔細閱讀本說明書,並檢查以下幾點。

問題	原因	解決方法
每次充電後使用時間很短	電池壽命問題	與本公司聯絡
使用中發現紅燈慢閃	電量不足	需要充電
放電中發現紅燈快閃	電池故障	與本公司聯絡



產品技術與參數

 產品名稱
 : 手持汽車吸塵器

 產品型號
 : MAX-S09FDWVCD

電源類別 : 充電式

電池 : Li-ion, 7.2V 2calls, 2.0AH

功率 : 85W

充電時間 : 2H+-0.5H, 常亮綠燈表示充滿電


整機累計使用時間 : 10分鐘以上

吸力 : 5.0Kpa以上 塵盒容量 : 100ml

產品尺寸 : 87.5 x 70 x 316.5mm

產品淨重 : 810g

Handheld Car Vacuum Cleaner

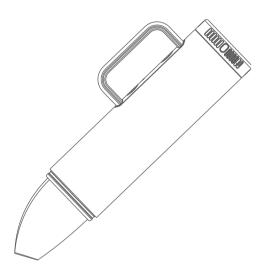

User Manual MAX-S09FDWVCD





COMPANY PROFILE

After two decades of experience in the health industry, maxcare founder utilized his knowledge and expertise in massage therapy from an Asian-Pacific perspective to establish our brand - maxcare Our massage therapy business was expanded to Hong Kong in 2012 and is conferred 2017 Hong Kong Top Brand Award. Based in Hong Kong, we are specializing in design & innovation, manufacturing, and retailing of massage and healthcare products.

Believing in the value of 'Technology improves our quality of life' and 'Caring for your family', moxCore' has been innovating highly qualified products with international patents. Besides, moxCore' products fulfill various international safety standards, namely EU CE Mark, US UL/ETL Mark, Germany GS Mark, TUV certification, and China CCC Mark.

Motivated by our value, <code>maxcare</code> founder has been leading us to be one of the most competitive brands in Hong Kong health industry. <code>maxcare</code> applies the contemporary fashion design – neat and modern – on the mechanical engineering of massage chairs. To deliver our value and offer incredible massage experience and healthcare solution to the public, <code>maxcare</code> devotes to the innovation, design, manufacturing the top-notch family massage products. By integrating the company philosophy – Spirit Of Healthy Life - into our products, <code>maxcare</code> brings health to everyone.

Handheld Car Vacuum Cleaner

Thank you for purchasing the Maxcare products. Before using the product, please read this manual thoroughly, particularly the Safety Precautions section, for the correct use of the product.

This manual should be well kept for easy reference. It enables you to perform a safe and efficient operation.

CONTENT

Safety Precautions	P.01 - P.02
Name and Function of Components	P.03
How to Use	P.03 - P.06
Cleaning and Maintenance	P.07
FAQs and Solutions	P.08
Technical Specifications	P.09



Safety Precautions

1. Important safety warning

- For adults only.Do not put this product into water or let water get into it.
- Do not drop or misuse this product.
- Please use well-grounding power supply suited to this product.
- · Do not leave this product unattended when working or on charge.
- Keep children and pets away from the movable parts of this product
- When in use, sliding or transporting, please ensure that there are no people or pets nearby to avoid accidents.
- Please use well-grounding power supply suited to this product.
- Please pull out the plug after use or before cleaning to avoid injury or damage to the product.
- Do not use unauthorized accessories.
- Do not use this product outdoors.
- Please read this manual instruction carefully before operation.
- Any other usage that is not listed in this manual instruction is forbidden.
- Please check if any part of this products is damaged before use. If so, please do not use
 it and contact us for repair.
- · Please do not use it if the cover is broken or damaged.
- Please do not use it if the shell or surface is damaged.
- Please do not drop anything into this product.
- Please do not fall asleep while using this product.
- · Please do not use it while driving.
- Please do not use it if drunk or feeling unwell.
- Please do not keep sharp objects in pockets when use.
- Keep the plug clean from needles, rubbish or water.
- If the power cord is damaged, do not attempt to change on your own. Please contact us for repair for safety reasons.

2. Environment for usage

- · Please don't use any power source with a "fast-charge" function, to avoid circuit protection.
- · Please do not use it in a moist environment such as bathrooms.
- Please do not use it when there is a drastic change in temperature.
- Please do not use it under heavy-dusty or caustic environment.
- Please do not use it where there is not enough space or not good ventilation.
- Please switch off the power and unplug the machine after use.
- Please do not use it when surrounding temperature is up to 40°C.
- Please do not use it when surrounding temperature is below 5°C. The lubricant can thicken quickly and increase the friction between parts.
- Turn off and pull out the plug during thunderstorms.
- Do not use outdoors.
- Do not place it near fire or directly under the sun.
- When moved from a low-temperature storage to a warm environment, the moisture inside the machine may affect, or damage, its functionality. Please rest the product within room temperature for 1 hour before use.



Safety Precautions

3. Safety


- · Please do not place heavy objects on this product.
- · Only one person at a time.
- · Check if the voltage is suitable to the specification of this product.
- Do not use wet hands to pull the plug.
- Do not allow water to get into the product, to avoid electric shock or damage to this product.
- · Do not pull or drag the power cord when unplugging. Please be gentle.
- Do not damage the wires or change the circuit of this product.
- Do not use wet cloths to clean the electric parts such as the switch and plug.
- · Be away from this product during power cut to prevent injury in case power resumes suddenly.
- Stop using this product if there appears any irregularity, and please contact us immediately.
- · This appliance is not intended for people (including children) with reduced physical, sensory or mental capabilities, or a lack of experience and knowledge, unless they are under supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- · If the power cord is damaged, it must be replaced by us in order to avoid a hazard.
- · Keep the power cord away from hot or moving objects.
- Please cut off power and pull out plug before moving.
- If the product is found damaged, broken, suffering from power leakage, or with exposed parts, please stop using it.
- Do not leave the product unattended when it is operating.
- · Do not turn on the product when it is being charged.

4. Maintenance


- . This product should be maintained by us, users are prohibited to disassemble or maintain by themselves.
- Please always turn off the main power after use.
- · Do not use this product if the socket is loose.
- If this product is to be left idle for long, please tie up the power cords and keep it in dry and dustless environment.
- · Do not keep this product at a high temperature or near fire. Do not keep under direct sunlight.
- Please clean this product with dry cloths. Do not use thinner, benzene or alcohol.
- The mechanical components of this product are specially designed and made, no special maintenance required.
- · Do not point sharp objects at this product.
- · Please use it intermittently; do not keep it continuously running for long.

5. Solution of ordinary malfunctions

· It is normal if the motor makes noises during operation.

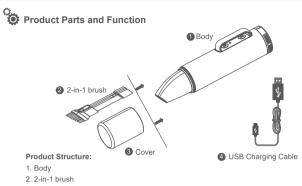

- 3. Cover
- 4.USB Charging Cable

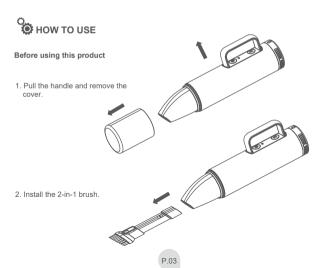



HOW TO USE

How to Charge:

If you find the red light flashing slowly, it means the battery is low and need charging immediately.

- 1. Stop using the product and place it on the table.
- Install the USB charging cable to the 5V2A adapter and connect to the power (the adapter prepared by yourself).
- Connect the Type C cable to the Type C port on the product.
- 4. Green light flashing slowly, it means charging.
- 5. Green light on, it means fully charged.
- 6. Please remove all the charging cable after fully charged.





- Please note that the charging port cannot water in, otherwise it would cause the malfunction.
- Do not charge or store the product below 0°C or above 40°C, otherwise the product will performance penalty.
- 3. It is normal that the product's temperature will higher when you charging it.

How to use (The part of the vacuum cleaner)

 Remove the cover and press the power button to turn on the product. Press the power button again to turn off the product.



2. Install the 2-in-1 brush.



Press the power button to turn on the product. Press the power button again to turn off the product.







HOW TO USE

How to use (The part of the flashlight)


1. Press the flashlight button to turn on the high beam.

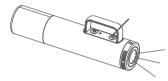

2. Press the flashlight button again, turn off the high beam and will turn on four small night lights.

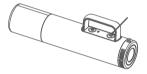

Press the flashlight button third time, turn off four night lights and high beam will flash as SOS frequency.

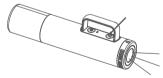


Those three function is a cycle. If you need to turn off the flashlight, you may need to press the flashlight button for 3 second.



O HOW TO USE

How to use (Remove dust and clean the dust box)

- Rotate the dust box clockwise and pull out from the vacuum cleaner.
- Remove the filter from the dust box and clean the dust box.
- 3. Rotate the rack in the filter anticlockwise, you can clean or replace the new filter.
- Please make sure every part was fully dried and install back to the vacuum cleaner. You can clean the dust box and filter when it was too dirty.

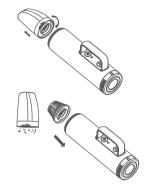





- 1. Is only suitable to use in indoor and must need to read before using.
- 2. Only suitable for cleaning the dust less than 10mm.
- Is not suitable for cleaning liquids, organic solvents, construction waste and industrial metal waste.
- 4. When the vacuum cleaner working until discharge, please turn off and rest for 30 minutes before recharging. It can protect the battery and motor.
 - 5. Please keep the product in a dry place.
- If the product store over 6 months, it may need to completely discharge and recharge.
- 7. Need to discharge and recharge 3 times to protect the motor and battery.





Cleaning and Maintenance

Cleaning

- Before cleaning, please make sure the switch has been turned off and the power plug has been disconnected from the socket.
- · Use soft cloths to clean the surface of product and control panel.
- · Use lightly damp cloths to clean and then dry it.



- Do not pull the plug from the socket with wet hands.
- Please do not rinse the product. Avoid water/ liquids from getting into the product.
- Do not use corrosive cleaning agents like benzene or thinner to clean the product, otherwise, the color of product will fade, and the internal parts may be corrupted or broken.
- Do not disassemble the product when it is humid. Simply let it dry.

Maintenance

- · Make sure that the plug has been disconnected from the socket before maintenance.
- Keep the product clean and away from high-temperature/ humid areas, or any environment with volatile gases.
- If this product is to be left idle for long, properly cover it with a dust cover (self-purchase).



 Please keep the product away from direct sunlight, or high temperature, to avoid fading or product damage.

Kindly reminding

- If the product is used through the year, please check conditions as below:
 - * Burnt smell.
 - * Unstable power supply after contact with the power cord.
 - * Power cord heating up.
 - * Power cords damage.
 - * Other abnormalities.



- · If above mentioned happens, please stop using the product.
- · Switch off the power supply, pull out the plug, and contact us.
- Do not disassembly the product by yourself.



? FAQs and Solutions

Issues	Possible Causes	Solutions
Usage time was too short after fully charged	The problem of the battery	Contact us
The red light flashing slowly when working	Low battery	Put on charge immediately
The red light flashing quickly when working	The problem of the battery	Contact us



Technical Specifications

Product Name : Handheld Car Vacuum Cleaner

Product Model : MAX-S09FDWVCD
Power type : Rechargeable

Battery capacity : Li-lon 7.2V 2cells 2.0AH

Rated power : 85W

Charge time : 2H±0.5H, green light normally on when fully charged

Running time : About 10mins Suction : Above 5.0KPa

Dust cup capacity : 100ml

Product size : 87.5 x 70 x 316.5mm

Net weight : 810g



商標持有:美斯凱實業有限公司

Trademark holder: Maxcare Industrial Limited

客戶服務熱線 Customer Service Hotline:

香港 Hong Kong - (852) 2950-9383

中國 China - (86) 400 882-1883

www.maxcare.net www.maxcareonlineshop.com