

— 心椅

Uni - Chair

User Manual
MAX-77A155BR




maxcare®



COMPANY PROFILE

After two decades of experience in the health industry, **maxcare** founder utilized his knowledge and expertise in massage therapy from an Asian-Pacific perspective to establish our brand - **maxcare**. Our massage therapy business was expanded to Hong Kong in 2012 and is conferred 2017 Hong Kong Top Brand Award. Based in Hong Kong, we are specializing in design & innovation, manufacturing, and retailing of massage and healthcare products.

Believing in the value of 'Technology improves our quality of life' and 'Caring for your family', **maxcare** has been innovating highly qualified products with international patents. Besides, **maxcare** products fulfill various international safety standards, namely EU CE Mark, US UL/ETL Mark, Germany GS Mark, TUV certification, and China CCC Mark.

Motivated by our value, **maxcare** founder has been leading us to be one of the most competitive brands in Hong Kong health industry. **maxcare** applies the contemporary fashion design – neat and modern – on the mechanical engineering of massage chairs. To deliver our value and offer incredible massage experience and healthcare solution to the public, **maxcare** devotes to the innovation, design, manufacturing the top-notch family massage products. By integrating the company philosophy – Spirit Of Healthy Life - into our products, **maxcare** brings health to everyone.



Uni - Chair

Thank you for purchasing the Maxcare products. Before using the product, please read this manual thoroughly, particularly the Safety Precautions section, for the correct use of the product.

This manual should be well kept for easy reference. It enables you to perform a safe and efficient operation.

CONTENT

| | |
|---------------------------------------|-------------|
| Safety Precautions | P.01 - P.02 |
| Name and Function of Components | P.03 - P.04 |
| How to Use | P.05 - P.09 |
| Cleaning and Maintenance | P.10 |
| FAQs and Solutions | P.11 |
| Technical Specifications | P.12 |



Safety Precautions



1. Important safety warning

- Please use well-grounding power supply suited to this product.
- Please pull out the plug after use or before cleaning to avoid injury or damage to the product.
- Please operate this product according to this manual instruction.
- Don't use accessories which are not recommended.
- Don't use this product outdoors.
- Please read this manual instruction carefully before operation.
- Any other usage that is not listed in this manual instruction is forbidden.
- 20 minutes of usage each time is recommended.
- Please don't use it if the leather is broken or damaged.
- Please don't use it if the cover or leather is damaged.
- Please don't use it if the radiator hole is covered or blocked.
- Please don't drop anything into this product.
- Please don't fall asleep while using this product.
- Please don't use it if drunk or feel unwell.
- Please don't use it within one hour after having meal.
- Please don't adjust to the greatest intensity at the beginning of the massage to avoid the risk of being injured.



2. Environment for usage

- Please don't use it under high temperature and moist environment such as bathrooms.
- Please don't use it immediately while the environmental temperature changes sharply.
- Please don't use it under heavy-dusty or caustic environment.
- Please don't use it where there is not enough space or not good ventilation.



3. People who are not suitable to use this product.

- People who are suffering from osteoporosis are not suitable to use this product.
- People who are suffering from heart disease or carrying electronic medical equipment such as heart pacemaker are not suitable to use this product.
- People who are suffering from fever are not suitable to use this product.
- Pregnant women or women that are in menses period are not suitable to use this product.
- People who got injured or skin disease are not suitable to use this product.
- Children under 14-year old or people mentally unbalanced without being supervised are not allowed to use this machine.
- People who are told by doctor to have rest or people who feel unwell are not suitable to use this product.
- People whose bodies are wet are forbidden to use this product.
- The appliance has a heated surface. Persons insensitive to Heat must be careful when using the appliance.



4. Safety

- Check the voltage if it is suitable to the specification of this product.
- Don't use wet hand to pull the plug.



Safety Precautions

- Don't make water go inside this product to avoid electric shock or causedamage to this product.
- Don't damage the wires or change the circuit of this product.
- Don't use wet cloth to clean the electric parts such as switch and plug.
- Be away from this product under power cut state to avoid injury if the power come back suddenly.
- Stop using this product while it works abnormal, and please consult us immediately.
- Stop using this product if you feel unwell, and please consult health care doctor.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the power cord is damaged, it must be replaced by us in order to avoid a hazard.



5. Maintenance

- This product should be maintained by us, users are prohibited to disassemble or maintain by themselves.
- Please don't forget to cut the power after usage.
- Don't use this product if the socket looses.
- If this product will be left unused for long, please curl up the wires and reserve this product in dry and dustless environment.
- Don't reserve this product under high temperature or near the fire and avoid longtime direct sunshine.
- If the detachable cord / supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a Hazard.
- Please clean this product by a dry cloth. Don't use thinner, benzene or alcohol.
- The mechanical components of this product are specially designed and made, it is not necessary to be specially maintained.
- Don't use edged res to thrust this product.
- Don't roll or pull this product above uneven ground, it should be lifted before moving.
- Please use it intermittently; don't make this product work continuously for long.




6. Solution of ordinary malfunctions

- It is natural if the motors make noises during operation.
- If the controller can't work normally, please check the plug and socket if they are connected strongly and make sure the switch is turned on.
- If the rated working time is over, the product will automatically activate the power-off button; If this product works continuously for long, the temperature protector will make the product automatically power-off, it should be used again after half an hour's rest.





Warning

The massage chair is relatively light. Please refrain any risky acts, e.g. climbing or jumping, with it, or else the chair may fall and cause product damage or personal injury.

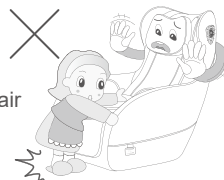

 Name and Function of Components

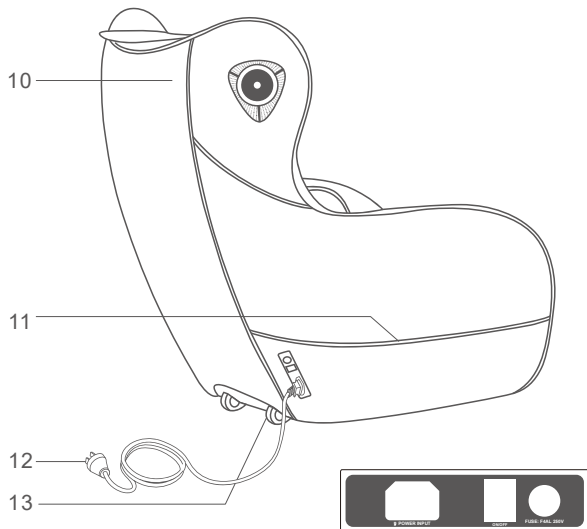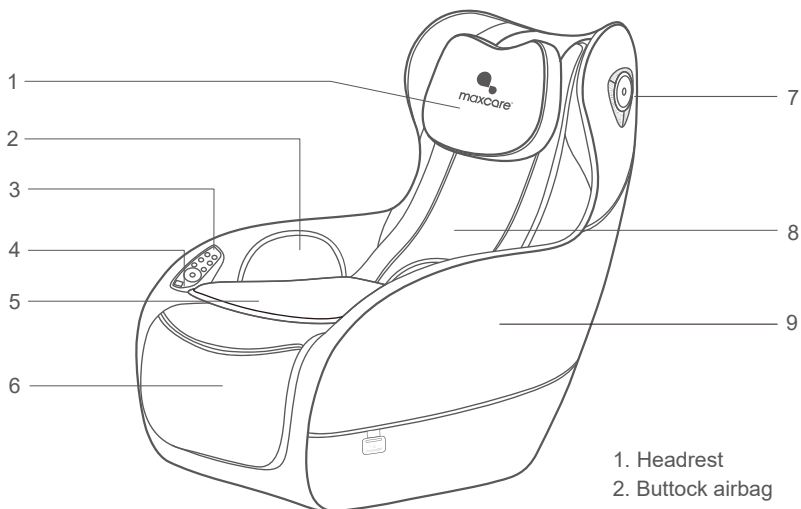

- 1. Headrest
- 2. Buttock airbag
- 3. Control panel
- 4. USB port
- 5. Seat Cushion
- 6. Front windshield
- 7. Bluetooth digital sound
- 8. Back cushion
- 9. Armrest
- 10. Back cover
- 11. Decoration
- 12. Power cord and power plug
- 13. Wheels
- 14. Power cord socket
- 15. Power switch
- 16. Fuse box




Name and Function of Components



Function:

- This product is designed with 2 sets of mechanical massage hands. One set is specially designed for neck. The other set massage mechanism can move up and down, four-wheel drive and muted design.
- Set with 3 simulation massage methods: kneading, tapping, sync with kneading and tapping.
- Set with auto massage function: auto I, auto II, auto III and demo four auto modes..
- Set with massage mechanism hands can manually adjust position. Can positioning massage according to your needs. Have kneading and tapping function with 3 levels speed optional.
- Set with neck kneading massage independently: Have bidirectional kneading one-way kneading optional. Can manually adjust neck & shoulder massage hands position.
- Set with air pressure massage function: Air pressure to the buttocks, 3 levels optional.
- Neck & shoulder heating function, use carbon fiber as infrared heating source.
- Set with USB charging jack.
- Connect to smart devices by blue tooth, can play music wireless.
- Have music playing system, with two 3D digital sound on your shoulders.
- SL supper long curve rail fits your body, can enjoy personal massage from shoulder to thigh.
- Massage hands restore automatically after turning off.
- The seat have extra cushion. Can relieve massage intensity on your buttocks. The users can decide whether use it or not. Or you can remove it.

 How to Use

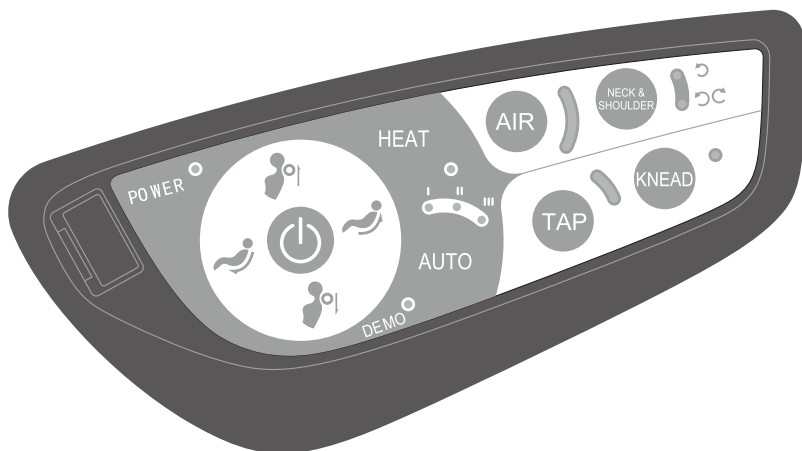

*Product images are for illustrative purposes only and may differ from the actual product.



How to Use



1. Switch on the machine



Diagram of plugging in




Diagram of the switch position







2. Start the massage

1. Press the power button to start the massage.
2. Enter the Auto I mode automatically. You can choose other massage modes if you want.

A) \ Auto massage :

| Name | Button | Description | Light Display |
|--------------|---|---|-----------------------|
| Auto massage |  | Auto I: Whole body massage, relax sore spots | See the LED indicator |
| | | Auto II: Focus on the neck and the back | |
| | | Auto III: Focus on the waist, buttocks and thighs | |
| | | Demo: Briefly experience all massage functions in 5 minutes | |

B) \ Back massage

| Name | Button | Description | Light Display |
|-----------------------------|---|--|-----------------------|
| Massage Function |  | Turn on/off the kneading massage function | See the LED indicator |
| |  | Turn on/off the tapping massage function. 3 intensity levels available: weak, medium and strong. | |
| Massage Position Adjustment |  | Massage hands moving upward | |
| |  | Massage hands moving downward | |



How to Use

C) Neck & Shoulders Massage :

| Name | Button | Description | Light Display |
|-----------------------------|--------|---|-----------------------|
| Massage Function | | Turn on/off the one-way/two-way kneading function | See the LED indicator |
| Neck and Shoulders Heating | | Turn on/off the heating function | |
| Massage Position Adjustment | | Massage hands moving upward | |
| | | Massage hands moving downward | |

D) Buttocks Air Pressure Massage :

| Name | Button | Description | Light Display |
|--------------|--------|--|-----------------------|
| Air Pressure | | Turn on/off the air pressure massage function for buttocks. 3 intensity levels available: weak, medium and strong. | See the LED indicator |

3. Operating the Bluetooth speakers

1. Select "Setting" on your smartphones/tablets -> Choose "Bluetooth" -> Turn on "Bluetooth" -> Searching the new Bluetooth device
2. The Bluetooth name of the massage chair will be in the format of "IMCM-0066". Select and connect.
3. Enter the password "0000" or "1234".
4. Open the music player on your personal device and enjoy the music via the Bluetooth speakers on the massage chair.



CAUTION

The actual Bluetooth name of the massage chair may differ from this manual. It could be in the format of "IMCM-0066" or "IMCM-0061" or "IMCM-0088" etc.

4. Turn off the power to stop the massage

1. Press the red power button to stop the massage. Or the massage function will be stopped automatically after the setting time
2. Cut off the power of the massage chair after use.




· Diagram of unplugging




· Diagram of the switch position

 **How to Use****5. Usage of the seat cushion**

With extra cushion on your seat, can relieve the hardness on your buttock, the users can decide to use it or not. Or you can disassemble it.

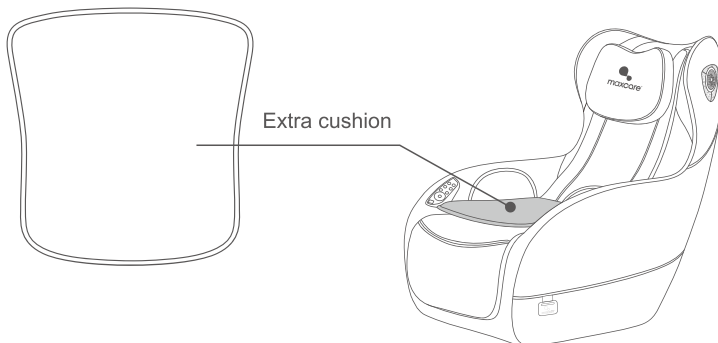**6. Floor protection**

Placing a heavy massage chair on the wood flooring for a long time may damage the floor. Please place a carpet or other object to avoid this.

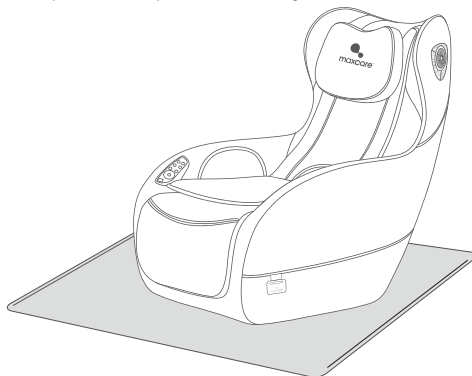

CAUTION

Do not move the chair with its wheels on bumpy ground or in a narrow space. Two people are required to life the chair. Please grab the covers next to the armrest while moving the chair. Please do not life the armrest directly.

 How to Use

7. Method of movement

Turn off the power switch, unplug the power wire, remote controller wire. Hold a groove in the back plastic cover to tilt the backrest backward to a certain degree (with the gravity center resting on the wheels), push the chair forward or backward with your hands and finally resume the chair to the normal position in a slow and gentle manner.

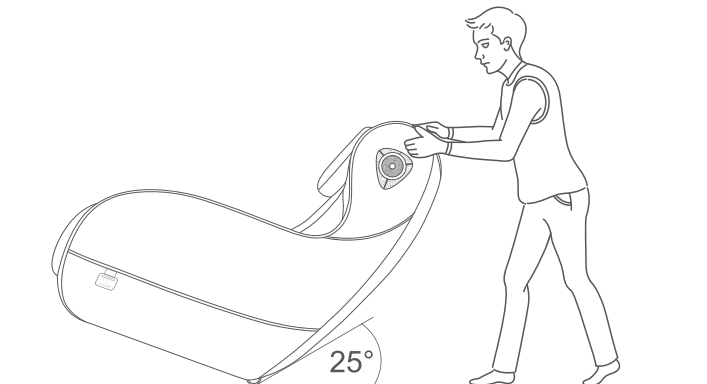**CAUTION**

During movement you must turn off the power switch first and then unplug the power cord and hand controller connecting cord.

Cleaning and Maintenance

Cleaning

- Before cleaning, please make sure the switch has been turned off and the power plug has been pulled out from socket.
- Use soft cloth to clean the surface of product and control panel.



CAUTION

- Do not pull the plug from socket with wet hands.
- Rinsing this product with water is not allowed.
- Do not use corrosive cleaning agents like benzene or thinner to clean the product, otherwise, the color of cushion will fade and the internal parts may be corrupted or broken.
- Do not disassemble the product when it is wet.

Maintenance

- Make sure that the plug has been pulled out from the socket before maintenance.
- Keep the product clean and away from high humidity & temperature or high volatile air environment.
- If the product were not to be used for a long period of time, please cover the cushion with a dustproof cover (self provided).



CAUTION

- Please make sure the product is placed in shadow and normal temperature environment to avoid depigmentation.

Kindly reminding

- If the product is used through the year, please check conditions as below:
- Burnt smell.
- The power cords do not work every time.
- The power cords glow.
- The power cords damage.
- Other abnormalities.



CAUTION

- If above mentioned happens, please stop using the product.
- Switch off the power supply, pull out the plug, and contact us.
- Do not disassembly the product by yourself.

FAQs and Solutions

| No. | Symptom | Reasons | Solution |
|-----|----------------------------|--|--|
| 1 | Weird sounds are produced | There may have some sounds when the product runs normally especially when the massage hands are rubbing against the cloth cover. | No action is needed |
| 2 | The product is not working | The power adapter is loosened in connection | Connect firmly again |
| | | The power switch is off | Switch on the power button |
| | | The power plug is disconnected | Insert the plug into socket firmly |
| 3 | Suddenly stop operating | Power off | Check if the power cord is connected |
| | | Massage time more than 20 minutes | Press the power button again |
| | | Using the product for a long period of time and it turns off automatically | Turn on the product after it has been cooling down |
| | | The massage hands are stuck | Relax and reduce the pressure on the product |

If the abnormal situations remain unsolved after taking above solutions, please contact us.

 **Technical Specifications**

| | |
|------------------|--------------------------------|
| Product Name | : Uni Chair |
| Product Model | : MAX-77A155BR |
| Rated Voltage | : 220-240V ~50/60Hz |
| Rated Power | : 60W |
| Rated Time | : 20 minutes |
| Noise | : 55dB |
| Safety Structure | : Class I |
| Compliance | : GB4706.1-2005 GB4706.10-2008 |